Setting 4G Calling Volte for Xiaomi

Sensitivity: Internal

Go To Setting >

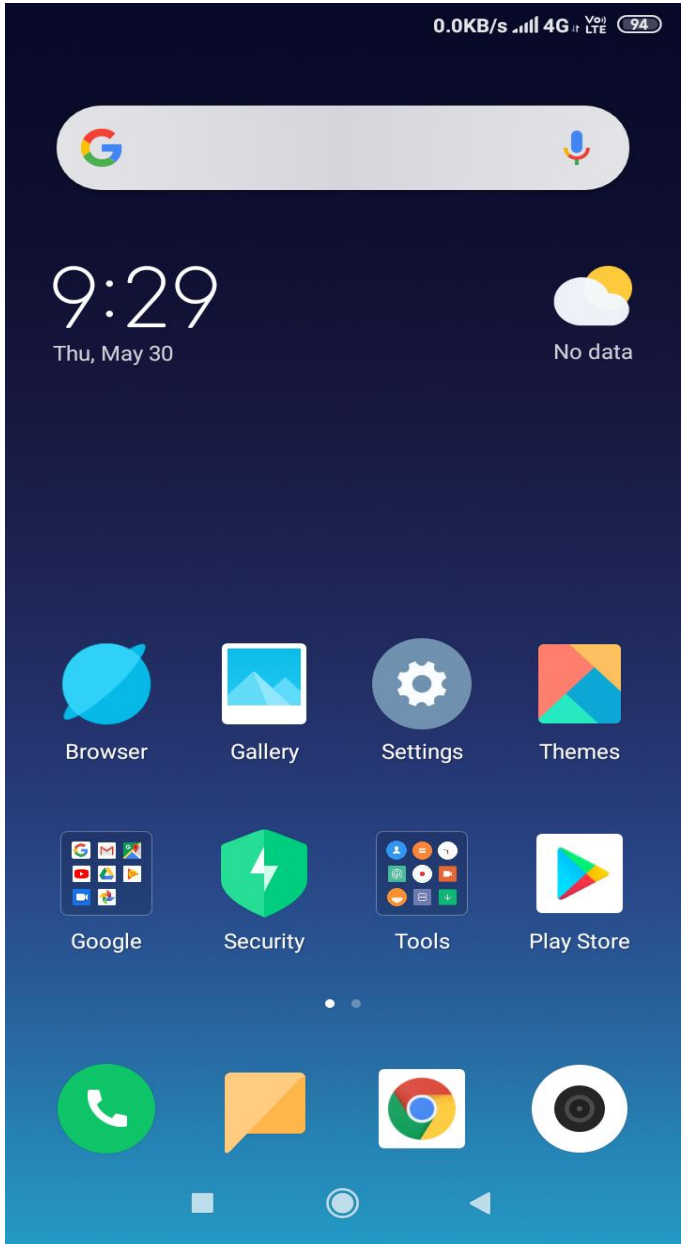

Go To SIM Card & Mobile Network

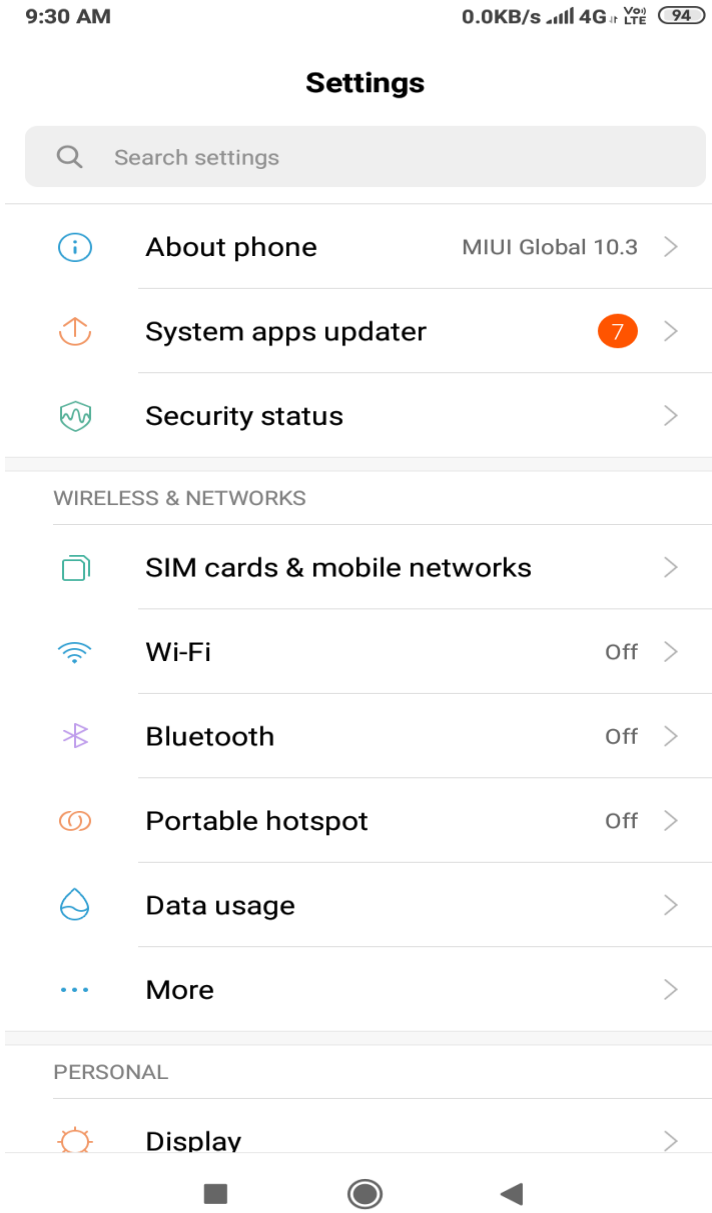

Go To SIM & information

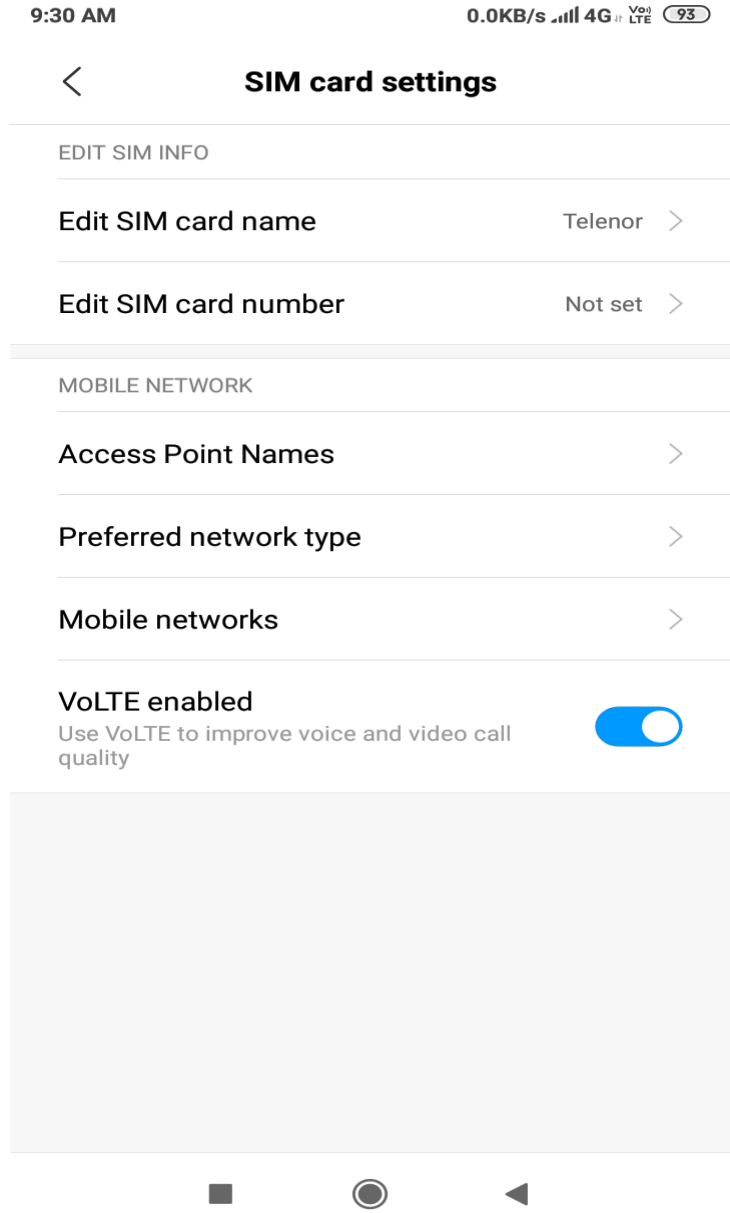

Sensitivity: Internal